
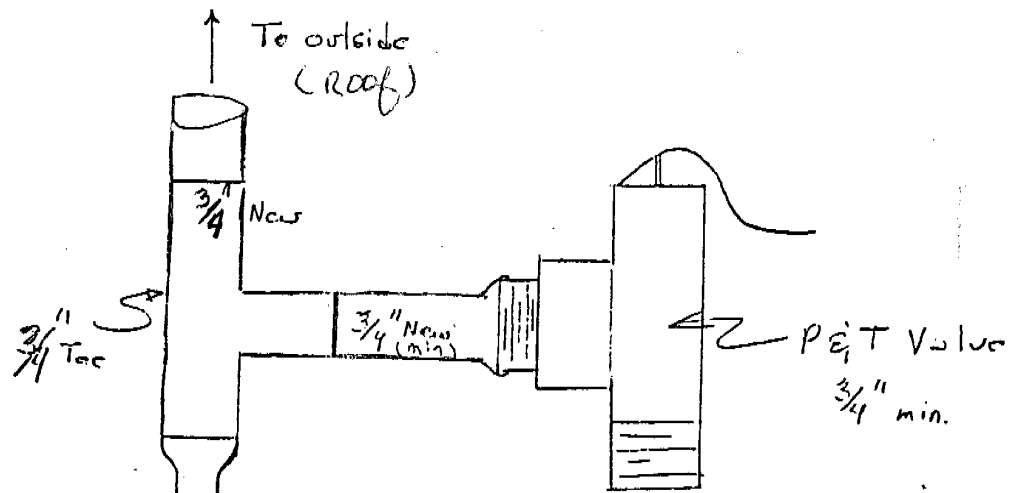


USE THESE DWGS, WHEN W.H. IS IN CENTER OF HOUSE, WITH A 1/2 RELIEF LINE OR NO RELIEF LINE TO OUTSIDE,

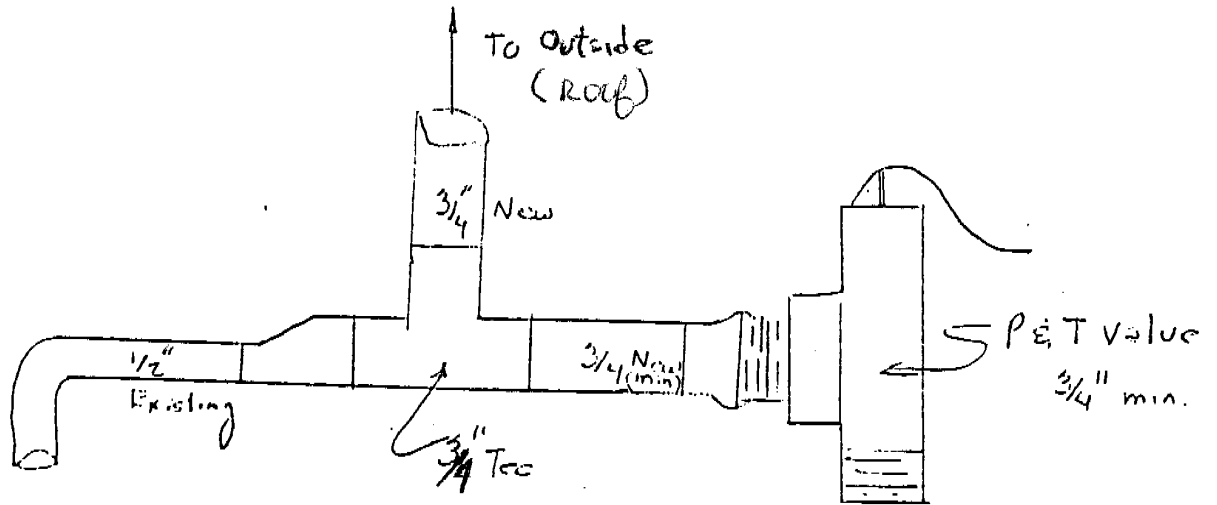

FOR EXISTING HOUSES  
CONNECT BOTTOM OF TEE TO  
EXISTING 1/2 RELIEF LINE OR  
DRILL A 1/16\" HOLE IN CAP

DRILL 1/16\" HOLE  
IN CAP

WHEN THERE IS NO OTHER  
WAY TO RUN A RELIEF LINE  
OTHER THAN UP TO ROOF